


QIG-MB550E - QUICK INSTALL GUIDE

Step 1 – Start by removing the old incandescent light.

Slide the back light cover off to get access to the old incandescent light.

Carefully slide out the fiber optic part of the backlight. Then disconnect the power cable and remove the old incandescent light.

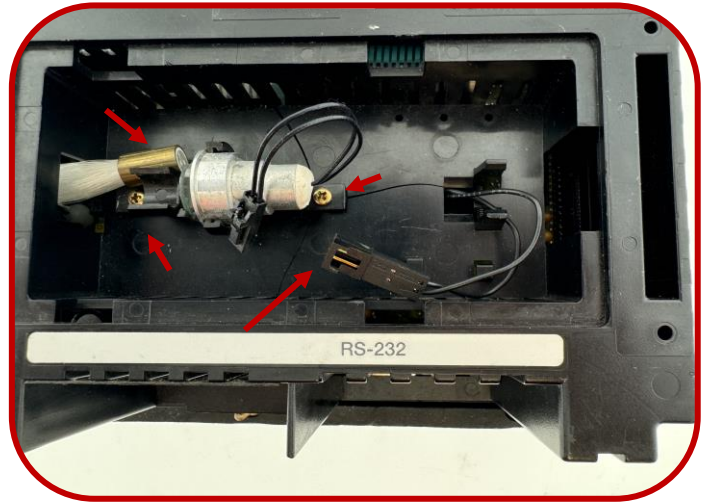

Step 2 – Install your new MB550E LED backlight where the old incandescent light was located.

Slide the fiber optic into the new backlight & tighten top screw. Slide front of LED mount under the front screw.

Install the back screw and tighten the front screw. Plug in power cable and reinstall backlight cover.

